

 




DVP3200V/75



PHILIPS

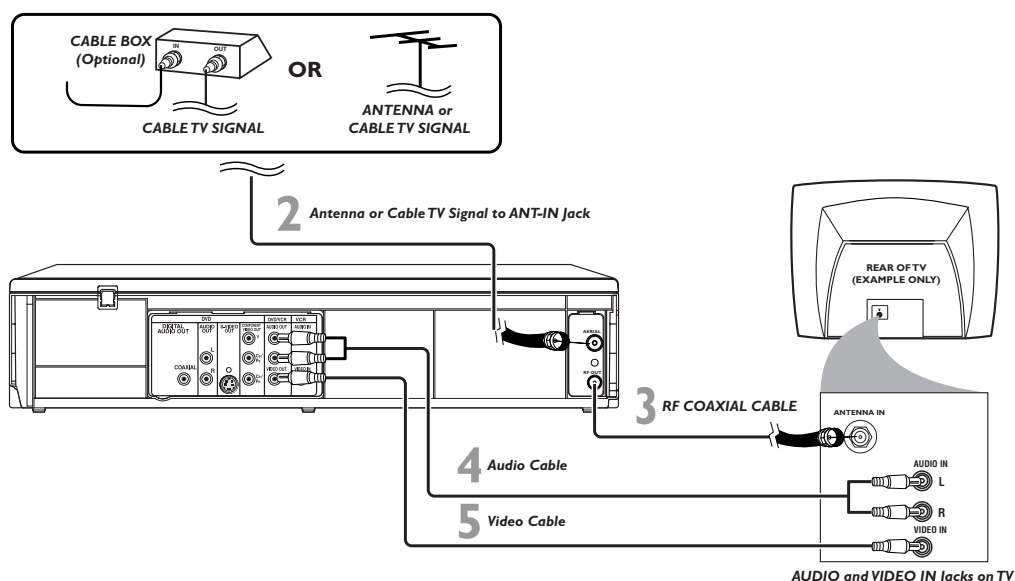There are many ways to connect your new DVD/VCR to your Television and other equipment. This Quick Start Guide shows the easiest, most common connection. Higher quality connections are explained in the accompanying owner's manual and will provide better sound or picture if your TV and/or audio system is compatible.




- 1** Disconnect all equipment from the power outlets. Connect the equipment to the power outlets only after you have finished hooking up everything. Never make or change connections with equipment connected to the power outlet.
- 2** Connect your Antenna TV signal or, if you have a Cable Box/Satellite Receiver, the OUT jack of your Cable Box/Satellite Receiver to the AERIAL jack on the rear of the unit using the supplied RF coaxial cable.
- 3** Connect another RF coaxial cable (not supplied) to the unit's RF OUT jack and to your TV's ANTENNA IN jack. The TV's ANTENNA IN jack may be labelled 75-ohm, TV IN or RF IN. Check your TV manual for details.
- 4** Connect the red and white audio cable (supplied) to the red and white DVD/VCR AUDIO OUT jacks on the DVD/VCR and to the red and white AUDIO IN jacks on the TV.
- 5** Connect the yellow video cable (supplied) to the DVD/VCR VIDEO OUT jack on the DVD/VCR and to the VIDEO IN jack on the TV. The VIDEO IN jack on the TV is usually yellow and may be labelled CVBS, Composite or Baseband video.
- 6** Plug the power cords of the unit and the TV into an active power outlet.
- 7** Turn on the TV and set it to the correct Audio/Video In channel.
- 8** Press **STANDBY-ON**  on the unit or  on the remote to turn on the unit. The first time you turn on the unit, you should complete the VCR setup. See the other side of this Quick Start Guide for details.


Quick Start Guide (cont'd)

Setting Up the VCR the First Time

- 1 Turn on the TV and set it to video channel.
- 2 Press **VCR**, then press **DISC/VCR MENU**. The VCR light will appear on the front of the unit. The display shown below will appear.

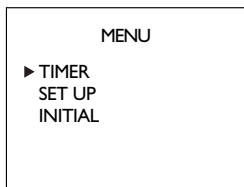


- 3 Press **▲** or **▼** to select "INITIAL", then press **▶**. Press **▲** or **▼** to select "CH TUNING", then press **▶**. Press **▲** or **▼** to select "AUTO".
- 4 Press **▶** to set up TV channels for the VCR. The AUTO SET UP message will appear. When setup is complete, the lowest TV channel will appear on the TV.

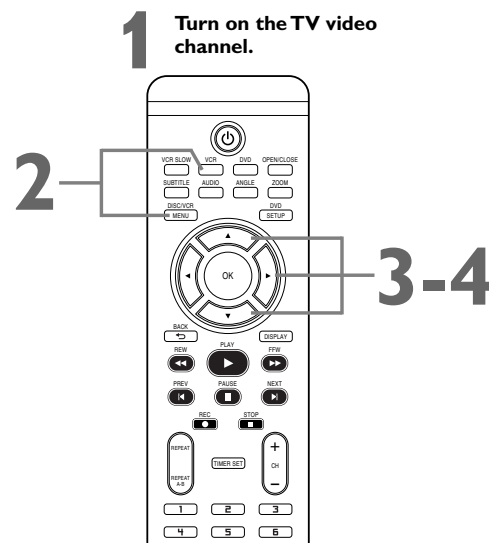


Playing a Disc

- 1 With the TV and the unit on, press **DVD** to put the unit in the DVD mode.
- 2 Press **OPEN/CLOSE** to open the disc tray. Put a disc in the tray with the label facing up and the shiny side facing down.
- 3 Press **PLAY ▶**. Tray closes and playback starts automatically. If not, press **PLAY ▶** again. If a DVD disc menu appears, use **▲ / ▼ / ◀ / ▶**, **OK** or the numerical key pads to select features or start playback. Follow the instructions in the menu.
- 4 To stop playing a disc, press **STOP ■**.

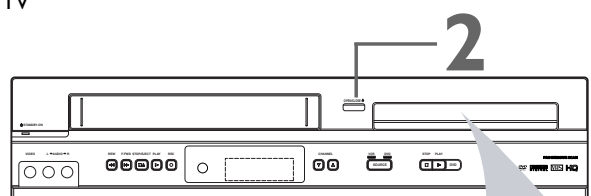

Remote Control Setting

- Before using the remote:
- Press **DVD** for DVD functions.
 - Press **VCR** for VCR functions.

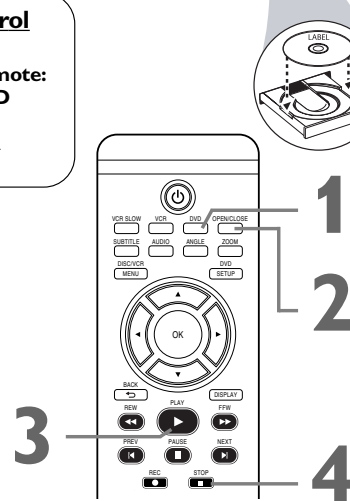

Playable Discs

The DVD player of this unit will play the following discs.



DVD is a trademark of DVD Format/Logo Licensing Corporation.


Windows Media is a trademark of Microsoft Corporation.

DivX, DivX Certified, and associated logos are trademarks of DivX, Inc. and are used under license.

DVDs must have a Region Code of ALL regions or Region 4.



DVDs must be recorded in the **NTSC** or **PAL** Color System. Your TV must also have the NTSC or PAL color system.

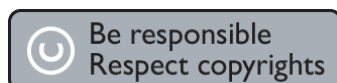

8239 300 47581
1VMN22794****
E8B23AD